

# MACHINE SOLUTIONS INC.



## USER MANUAL

### BEAHM DESIGNS BALLOON BONDER MODEL 520-B



**BEAHM**  
DESIGNS

Machine Solutions Inc. 2951 W. Shamrell Blvd. Flagstaff, Arizona 86005 USA

Tel: 928-556-3109 • Fax: 928-556-3084  
[Service@machinesolutions.com](mailto:Service@machinesolutions.com) • [www.machinesolutions.com](http://www.machinesolutions.com)

The Machine Solutions Inc. products shown and described in this catalog may be covered by one or more of the following US Patents: #6,629,350, #6,968,607, #6,925,847, #6,988,881, #6,931,899 and #7,069,794. Other US and International Patents Pending.

Machine Solutions, MSI, and 520B are trademarks or service marks of Machine Solutions Inc.  
Copyright (©) Machine Solutions Inc. All Rights Reserved.

Product images are representative of standard equipment offerings and may differ from delivered equipment.

---

## TABLE OF CONTENTS

---

Table of Contents .....	3
List of Figures .....	4
List of Tables .....	4
Welcome .....	5
Machine Description .....	5
Safety .....	6
User Alerts.....	6
Contents .....	7
Installation .....	7
System Controls and Features .....	8
Run Process.....	10
Set Up and Configuration.....	11
Parameter Settings .....	12
Temperature Controller .....	12
Setting Heat Duration .....	12
Setting Cool Duration.....	12
Adjusting Die Head Pressure.....	12
Omron Temperature Controller .....	13
Setting Temperature Controller Parameters .....	13
Autotuning Temperature Controller.....	13
Configuration of Temperature Controller Alarm .....	15
Setting Temperature Controller Offset.....	16
Omega Platinum Temperature Controller.....	17
Adjusting Temperature on Temperature Controller(s) .....	17
Resetting the Temperature Controller .....	17
EUROTHERM TEMPERATURE CONTROLLER .....	18
Auto-Tuning .....	18
Switching from Fahrenheit to Celsius .....	18
Maintenance .....	19

Cleaning.....	19
Exchanging Die Heads .....	19
Aligning Tooling.....	20
Fuse Replacement.....	21
Diagnostics And Troubleshooting .....	23
Specifications .....	24
Critical Parts .....	25
Customer Support And Satisfaction.....	26
Warranty And Limitations.....	27
Appendix A.....	29
Temperature Controller Layout and Description of Button Actions .....	29
Auto Tune Temperature Controller(s) .....	30
Changing Temperature Units on the Temperature Controller .....	34
Resetting the Temperature Controller(s) back to factory defaults. ....	35
Resetting the Temperature Controller(s) back to MSI settings. ....	36

---

## LIST OF FIGURES

Figure 1. 520-B CE Front Panel.....	8
Figure 2: 520-B Back Panel.....	9
Figure 3. Omron E5GC Temperature Controller .....	13
Figure 4. Auto Tune Enable .....	14
Figure 5. Temperature Alarm Setup .....	15
Figure 6. Temperature Offset .....	16
Figure 7. Fuse Replacement; Main Power .....	21
Figure 8. Power Entry Module Fuses .....	22

---

## LIST OF TABLES

Table 1. 520-B CE Front Panel Controls and Functions.....	8
Table 2. 520-B CE Back Panel Controls and Functions.....	9
Table 3. Diagnostics and Troubleshooting.....	23
Table 4. System Specifications .....	24
Table 5. Critical Parts List .....	25

---

## WELCOME

---

Machine Solutions, Inc. (MSI) would like to take this opportunity to thank you for purchasing your new 520-B Balloon Bonder machine. At MSI, we are dedicated to bringing innovative process development solutions to both medical device and nonmedical organizations. The MSI proprietary segmental technology has been successfully implemented in manufacturing clean rooms on five continents, and continues to expand – meeting, growing, and facilitating the abilities of device companies around the globe. MSI looks forward to helping your organization provide life-improving devices to your customers, today and tomorrow.

---

## MACHINE DESCRIPTION

---

The Beahm Designs Inc. Model 520-B CE Split Die Balloon Bonder is a system for the purpose of thermal bonding or welding thermoplastic components to other materials by means of a pair of heated dies while providing protection of the balloon or region of the materials from the process heat by means of a cooling chamber. The system features two die heads that remain at a constant process temperature vs. cycling the heat on and off. Each die head features one half of the bond diameter and are “opened” or separated from each other to allow the components to be positioned within the bored diameter. Digital timers control the bond and cool durations and integrated tooling secure the components during the process.

## SAFETY

---

- Use of eye protection when working with compressed gases and heated materials is advised.
- The maximum observed Sound Pressure Level is below 70 dBA.



**Caution: high voltage. Remove power and use safety precautions when servicing.**



**Caution: hot surface. Contact may cause burn. Allow to cool before servicing.**



**Caution: pinch point. Keep hands and body parts clear while in operation.**

## USER ALERTS

---

Do not use or otherwise operate the machine in any manner other than that in which it is explicitly intended. Examples: Do not attempt to sit on or climb on the equipment, do not place heavy objects or containers of liquid on the machine, do not to insert any foreign objects into the machine and do not attempt to bypass any guards.

**Note: The equipment is not for use with materials that can decompose or ignite below the maximum operating temperature of the machine. Hazards are materials that outgas hazardous substances and or ignite. (260°C/500°F).**

**Note: This equipment is not for use in an ATEX environment.**

---

## CONTENTS

---

Included with the system are the following contents:

- Die Base and Control Unit
- IEC Power Cord

---

## INSTALLATION

---

1. Place the system on a level, sturdy surface at an ergonomically viable height for the user.
2. Connect the electrical umbilical to the die base unit.
3. Connect the power cord to the main control unit.
4. Connect the air supply to the system and then to a clean, dry, and filtered compressed air source.

## SYSTEM CONTROLS AND FEATURES

Located on the front and rear panels are the following controls and/or displays and their function.

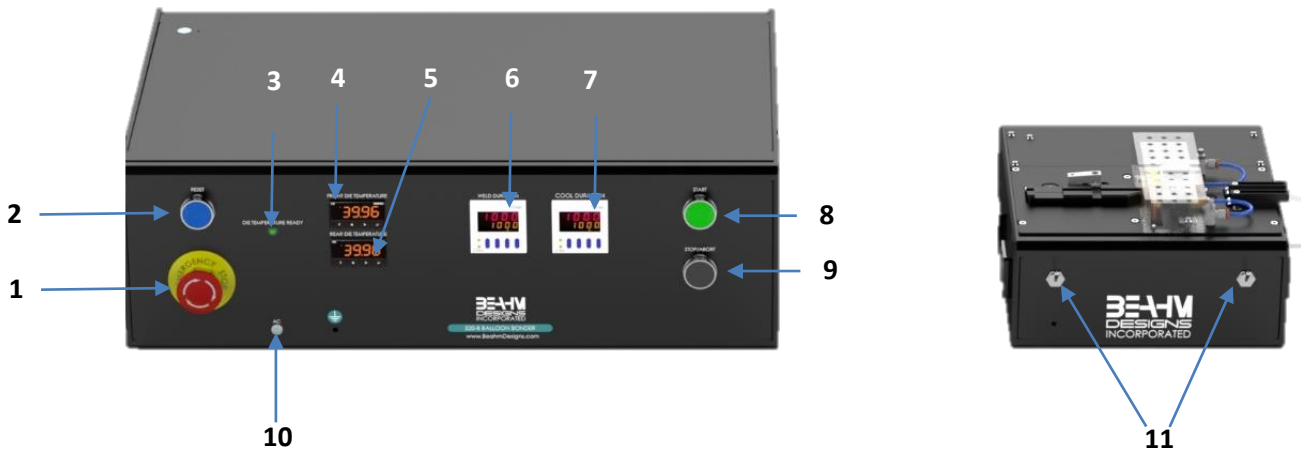


Figure 1. 520-B CE Front Panel

Table 1. 520-B CE Front Panel Controls and Functions

Item	Function
1	Disrupts power to heaters and internal components
2	Resets the system after power up and if E Stop is depressed
3	Indicates when the set temperature of the dies is reached, and a process can be initiated
4	Controls the temperature of the front die head
5	Controls the temperature of the rear die head
6	Controls the duration that the die heads are closed and/or in contact with the product
7	Controls the duration the cooling air flows
8	Initiates process sequence
9	Interrupts the process sequence and resets the system timer
10	Indicates when system AC power on by illuminating, off when not illuminated
11	Toggles the gripper and cooling shield assembly open/close





**Figure 2: 520-B Back Panel**

**Table 2. 520-B CE Back Panel Controls and Functions**

Item	Function
1	Supplies air from main control unit to die base unit
2	Supplies signal from thermocouples to main control unit
3	Allows connection to foot pedal
4	Toggles system power and air on and off
5	Connects to power cord

---

## RUN PROCESS

---

1. Position the components to be processed such that the balloon or region to be cooled during the process is within the cooling chamber.
2. Position the bond region outside of the shield assembly and in-line with the die heads.
3. Toggle (close) the gripper and shield assembly.
4. Depress the start button or foot switch to initiate the process sequence.
5. Upon completion of the cooling cycle, toggle (open) the gripper and shield assembly and remove the materials.

---

## Set Up and Configuration

---

Proper alignment of the tooling is crucial to optimizing process results and repeatability. The following guidelines are the recommended methods; however all applications vary, and several iterations of tooling process development may be required and may not follow all the recommended guidelines.

### **Grip/Positioning Nests**

This is the most forgiving of the tooling. The included, standard vee configurations are more than adequate for most applications. More important than the guide design and dimensions is alignment with the die heads. Refer to the maintenance section for the alignment procedure.

Customized nests and tooling are available. Contact Beahm Designs' sales to review the application and request a quote.

### **System Options**

Many optional accessories are available to enhance the functionality of the system and improve process yield. Contact Beahm Designs' sales department or visit our web site [www.machinesolutions.com](http://www.machinesolutions.com) for more information on available accessories and to request a quote. Examples of available accessories are:

- Vision systems with or without on-screen crosshair line generators.
- Laser line generators.
- Extended product support trays/guides.
- Product grip nests/alignment tooling.

Installation instructions are included with each specific accessory.

---

## PARAMETER SETTINGS

---

### *Temperature Controller*

**Note:** Verify what model temperature controller is on the machine

- Refer to page 13, Omron Temperature Controller.
- Refer to page 17, Omega Platinum Temperature Controller.
- Refer to page 18, Eurotherm Temperature Controller.

---

### *Setting Heat Duration*

- Depress the upper or lower half of the corresponding time digit to change its value.
- Depress the STOP/ABORT switch to reset the timer to the new value.

---

### *Setting Cool Duration*

- Depress the upper or lower half of the corresponding time digit to change its value.
- Depress the STOP/RESET switch to reset the timer to the new value.

---

### *Adjusting Die Head Pressure*

- Remove top plate on the control unit and rotate the **R1** regulator screw clockwise or counterclockwise until the pressure gauge displays the desired value.

---

## OMRON TEMPERATURE CONTROLLER

---

**Note:** Verify what model temperature controller is on the machine

The parameter settings for the temperature controllers have been pre-configured prior to shipment from Machine Solutions, Inc. However, if further details are required, refer to the Omron operating instructions for the model-E5GC temperature controllers included with the manufacturer's literature (delivered with the machine).



Figure 3. Omron E5GC Temperature Controller

---

### *Setting Temperature Controller Parameters*

The parameter settings, as defined by Machine Solutions, Inc. for specific operational functionality of the individual temperature control units, are detailed below. It is recommended that these parameter settings remain as they appear in the sections to follow. If parameters are changed incorrectly and cannot be restored, please contact [service@machinesolutions.com](mailto:service@machinesolutions.com).


---

### *Autotuning Temperature Controller*

Re-tune the temperature controller if dies are changed or modified, or to correct instability at process temperature.

1. Start with machine at ambient temperature.
2. Power on the machine. Ensure the heater switch (if applicable) is switched to “off” for the next two steps. If machine is not equipped with heater switch, ensure steps are completed quickly to minimize pre-heating.
3. Set controller to process temperature.
4. Follow the procedure shown in Figure 4.
5. If applicable, switch heater switch to “on” once controller is back to home screen. Controller will wait for temperature to stabilize before starting.


**Note:** Autotune is active when light next to “TUNE” is lit. The procedure may take up to 30 minutes.

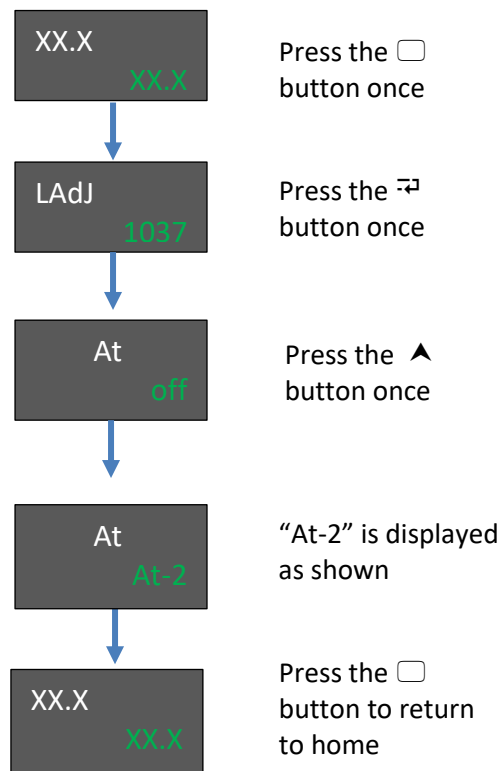

**Figure 4. Auto Tune Enable**

## ***Configuration of Temperature Controller Alarm***

Even after a successful autotune, temperatures may still have a small degree of instability. Temperatures may also drop unexpectedly if there is a fault with the equipment or if accessories are accidentally unplugged. To ensure the equipment notifies operators in the case of an unexpected temperature change, the temperature controllers are programmed with an alarm. Machine Solutions, Inc. recommends a temperature tolerance of  $\pm 2.5^{\circ}\text{F}$ , allowing the temperature to either rise or drop by as much as  $2.5^{\circ}\text{F}$  before the alarm activates. The procedure for configuring the temperature controller alarm is outlined in Figure 5.

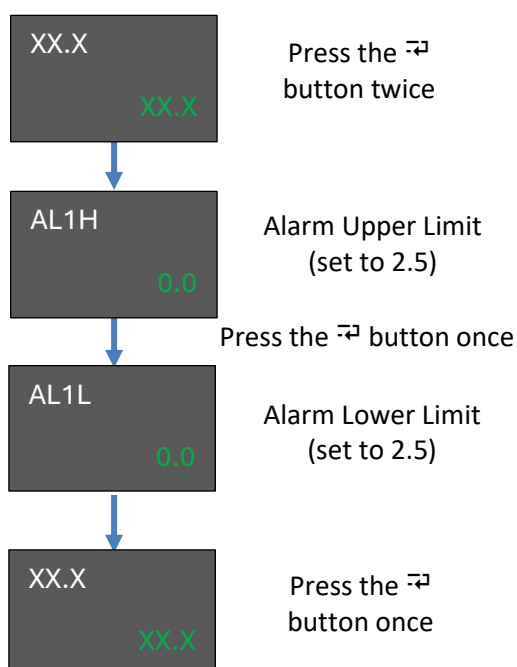

**Figure 5. Temperature Alarm Setup**


## ***Setting Temperature Controller Offset***

If there is a difference between the temperature measured by the thermocouple and the actual temperature of the head, then you may wish to adjust the temperature display with an offset.

There may be a temperature disparity between the temperature controller readout and the actual temperature at the working surfaces of the machine's dies (measured with an external standard). A temperature offset may be desired to reduce or eliminate this disparity.

Offset range -199.9 to 999.9 °F/°C

The following diagram, Figure 6, shows the procedure for inputting a known temperature offset:

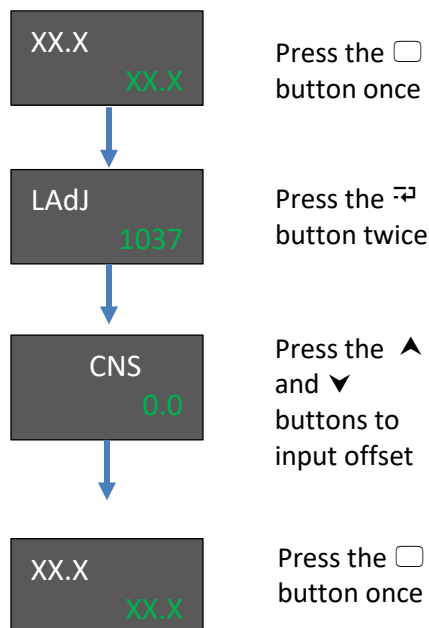

**Figure 6. Temperature Offset**



## OMEGA PLATINUM TEMPERATURE CONTROLLER








**Note:** Verify what model temperature controller is on the machine.

**ATTENTION: PRIOR TO MAKING ADJUSTMENTS, PLEASE SEE THE APPENDIX FOR FURTHER INFORMATION ABOUT THE OMEGA PLATINUM TEMPERATURE CONTROLLER. THE TEMPERATURE CONTROLLERS HAVE BEEN PRE-PROGRAMMED.**

### *Adjusting Temperature on Temperature Controller(s)*

Use the P<sub>RoG</sub> (Programming Mode) Menu

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
SP1	_____						Process goal for PID

	<b>Note:</b> If not at Level 1, push the  button to get to that level. <b>Level 1 = INIt, P<sub>RoG</sub>, and oPER</b>
	Navigate to <b>P<sub>RoG</sub></b> (Programming Mode).
	Select <b>P<sub>RoG</sub></b> .
	Navigate to <b>SP1</b> (Setpoint 1 parameter).
	Select the <b>SP1</b> .
	Set the desired temperature.
	Confirm the value. The heaters will ramp to correct temperature.

### *Resetting the Temperature Controller*

Refer to Appendix A on page 29 for resetting the Omega temperature controller and all temperature control settings.

---

## EUROTHERM TEMPERATURE CONTROLLER

---

**Note:** Verify what model temperature controller is on the machine.

**Note:** Auto-tuning can be performed at any temperature set point within the system operating specifications. This machine needs to be auto tuned at the temperature and air flow that your product will be processed at.

---

### ***Auto-Tuning***

1. Ensure heater power is off and heater is at room temperature.
2. Enter the process temperature setpoint using the ▼ or ▲ buttons.
3. Press Ⓞ until **R.TUN** is displayed.
4. Press ▼ or ▲ to select On.
5. Press Ⓞ to begin the auto tune process.
6. Turn heater power ON.

**Please note, after following this sequence, auto tune can take several minutes to start and complete.**

A full description of auto-tune and the purpose of other parameters in the level 2 list is given in the 3200 Manual located online at <https://www.eurotherm.com/download/3200-engineering-manual-ha028651-iss-15/>

---

### ***Switching from Fahrenheit to Celsius***

1. Press and hold the page button (left most) until Lev 1 appears.
2. Press up arrow to Lev 2 appears.
3. Press scroll to code 0.
4. Press up arrow key for code 2.
5. Press scroll button until units appear.
6. Press up or down arrow key to select C.

---

## MAINTENANCE

---

**Note:** Ensure the machine is unplugged for any servicing or maintenance work.

**Note:** Perform these steps **ONLY** when the machine is at room temperature.



**Caution:** pinch point/crush hazard. Keep fingers, hands, and clothing clear of moving parts.



**Caution:** hot surface. Contact may cause burn. Allow to cool before servicing.

---

### *Cleaning*

1. Use 99% isopropyl alcohol to wipe down the outside of the machine. Do not attempt to clean the inside of the machine. The machine should not be washed down.
2. Cleaning should be with a soft dry cloth only.

---

### *Exchanging Die Heads*

**Note:** Perform these steps **ONLY** when the die heads are at room temperature.

1. Remove both guards from the top of the remote assembly.
2. Unscrew set screws holding in thermocouples to the dies a few turns and remove thermocouples. Take care to not fully remove the set screws.
3. Remove the fasteners of each die head and remove the die heads.
4. Position the replacement die heads on the die bases.
5. Re-install the fasteners at the base of each die head, **DO NOT** tighten the fasteners.
6. Manually close the die heads and ensure that they are aligned left-to-right and, while holding the heads together, tighten the fasteners.
7. Re-install both guards to the top of the remote assembly.
8. Verify alignment.

## ***Aligning Tooling***

**Note:** Alignment should be performed on a prepared product subassembly.  
Alignment **MUST** be performed with system power off and dies at ambient temperature.  
Alignment must be performed on a flat and reasonably level surface.


1. Prepare a product/materials assembly.
2. Position the assembly within the vee guide and shield assembly.
3. Remove the guards from the top of the remote assembly.
4. Close the die around the material subassembly.
5. Using the adjustment screw of the positioning stage adjust the Z-axis of the vee guide assembly until the material assembly is aligned with the die head bore.
6. Adjust the Z-axis and Y-axis of the shield assembly until it is aligned with the die head bore.
7. Open the dies and remove the product/material subassembly.
8. Replace the guards on the remote assembly.

## ***Fuse Replacement***

The machine has two fuses located in the power entry module on the back of the machine.


1. To replace a blown fuse, remove machine power by unplugging the power cord from the machine.
2. Remove the cover of the power entry module using a screwdriver in the screwdriver slot (see Figure 7).

**Important: A blown fuse may indicate machine malfunction. If a fuse blows before exceeding its expected lifespan, then perform troubleshooting procedures. Contact MSI if the problem persists.**

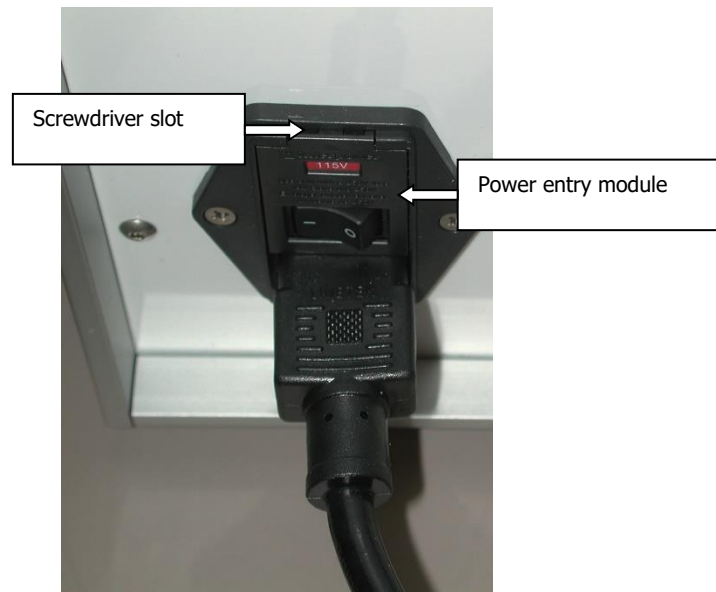

**Figure 7. Fuse Replacement; Main Power**

3. Remove the red fuse holder (see Figure 8).

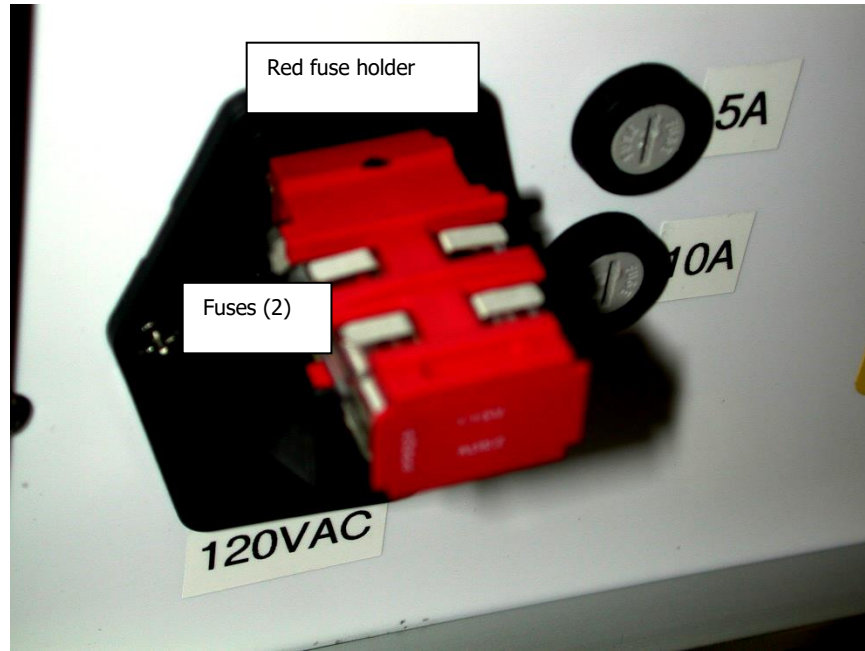

**Figure 8. Power Entry Module Fuses**

4. Remove the old fuse from the holder.
5. Insert the new fuse. Orientation of the fuse is not important. See machine labels for proper voltage.
6. Reinsert red fuse holder, ensuring the voltage label is right side up.

## DIAGNOSTICS AND TROUBLESHOOTING

**Table 3. Diagnostics and Troubleshooting**

Issue	Possible Causes	Solution
Temperature not stable	<ul style="list-style-type: none"> <li>Die heads replaced</li> <li>Thermocouple loose</li> </ul>	<ul style="list-style-type: none"> <li>Auto-tune (MSI recommends auto-tune to process temperature starting from ambient temperature.)</li> <li>Re-install thermocouple(s)</li> </ul>
“S.ERR” displayed (Omron temperature controller)	<ul style="list-style-type: none"> <li>T.C Sensor Break</li> </ul>	<ul style="list-style-type: none"> <li>Replace thermocouple</li> <li>Verify complete T.C. path</li> </ul>
“Open” displayed (Omega temperature controller)		
“S.br” displayed (Eurotherm temperature controller)		
Die heads do not close	<ul style="list-style-type: none"> <li>Air pressure is too low</li> <li>Timer set to “0”</li> <li>Valve defective</li> </ul>	<ul style="list-style-type: none"> <li>Increase air pressure</li> <li>Increase heat duration</li> <li>Replace valve</li> </ul>
Die head(s) do not heat	<ul style="list-style-type: none"> <li>Loose connection to main control unit</li> <li>Defective Temperature controller</li> </ul>	<ul style="list-style-type: none"> <li>Verify secure connections</li> <li>Replace temperature controller</li> </ul>
.Err code in display	<ul style="list-style-type: none"> <li>Temperature controller software failure.</li> </ul>	<ul style="list-style-type: none"> <li>Replace temperature controller</li> </ul>
System will not power on	<ul style="list-style-type: none"> <li>Emergency stop switch depressed</li> <li>IEC power cord not fully connected</li> <li>Fuse needs to be replaced</li> </ul>	<ul style="list-style-type: none"> <li>Rotate switch knob to engage</li> <li>Verify installation</li> <li>Replace fuse</li> </ul>

---

## SPECIFICATIONS

---

**Table 4. System Specifications**

Description	Range	Accuracy
Die Temperature	Ambient-500°F	± 10°F
Heat Duration	1-9999 seconds	± .1 sec
Cool Duration	1-9999 seconds	± .1 sec
Die Head Pressure	0-100 psi	± 10 psi
Gripper Pressure	0-100 psi	± 10 psi

---

### ***Facilities Requirements***

- Voltage: 120/240 VAC (depends on configuration) 50/60 Hz.
- Wattage: 500 max.
- Compressed Air: 60-125 psi, 0.5 SCFM, filtered 50 micron or greater, oil and water free.



## CRITICAL PARTS

For replacement or spare parts, please contact us at [service@machinesolutions.com](mailto:service@machinesolutions.com), or call 928-556-3109.

**Table 5. Critical Parts List**

Part Number	Description	Quantity
130118-001	VALVE, TOGGLE, 4WAY, 2 POSITION	2
1343250-001	VALVE, 2-WAY 24 VCD, MAC	2
1339452-001	VALVE, 5-2, 24VDC, BODY PORTED, SIDE BRACKET	1
1143311-001	RELAY, SOLID STATE, DIN MOUNT 25A DC/AC	2
1143303-001	TIMER, DIGITAL, LT4H, 24 VDC, COLOR LCD, 8 MODES	2
1143287-001	RELAY, 4VDC INTEGRATED	3
119106-001	RELAY, PLC, 24VDC, 1PDT	2
1161899-001	CONTROLLER, TEMPERATURE, 1/32 DIN, 24 VDC	2
110114-002	CONTROLLER, TEMP, OMRON	2
120V 1153590-001	HEATER, CARTRIDGE	2
220V 1157788-001		2
110295-001	FAN, 40MM, 24 VDC	2
1143133-001	THERMOCOUPLE	2
1144740-001	FUSE	2

---

## CUSTOMER SUPPORT AND SATISFACTION

---

Machine Solutions Inc. is proud of the advanced engineering and quality construction of each piece of equipment that we build. It is our goal to provide equipment that exceeds the expectations of the customer. By implementing the highest standards and applying our experience to provide a quality product, we maintain an ongoing, positive working relationship with all our customers.

Machine Solutions Inc. welcomes your comments and inquiries about our products and services.

Machine Solutions Inc.  
2951 West Shamrell Blvd., Suite 107  
Flagstaff, AZ 86005

Phone: 928-556-3109  
Fax: 928-556-3084  
E-Mail: [Service@MachineSolutions.com](mailto:Service@MachineSolutions.com)

---

## WARRANTY AND LIMITATIONS

---

### *General Warranty*

Machine Solutions Inc. (MSI) warrants its products to be free from defects in material and workmanship in normal every day use and service for a period of one year from the date of shipment from the factory in Flagstaff, Arizona. MSI's obligation under this warranty shall be limited to the repairing or replacing of the product or parts thereof which upon MSI's inspection reveals them to be defective. MSI reserves the right and option to refund the purchase price in lieu of repair or replacement upon evaluation of the returned original part. Modifications, misuse, attempted repairs by others, improper calibration or operation shall render this guarantee null and void. MSI MAKES NO OTHER WARRANTY REGARDING THIS PRODUCT, INCLUDING ANY EXPRESS OR IMPLIED WARRANTY. SPECIFICALLY, THERE IS NO WARRANTY OF MERCHANTABILITY OF THIS PRODUCT OR OF THE FITNESS OF THE PRODUCT FOR ANY PURPOSES. THE SUITABILITY OF THIS PRODUCT FOR ANY PURPOSE PARTICULAR TO THE CUSTOMER IS FOR THE CUSTOMER, IN ITS SOLE JUDGEMENT, TO DETERMINE. MACHINE SOLUTIONS, INC. ASSUMES NO RESPONSIBILITY FOR THE SELECTION OR USE OF THIS PRODUCT BY CUSTOMER. This product has not been tested or approved by the U.S. Food and Drug Administration or any other agency of the U.S. government. This product is not a consumer product as that term is defined in the Magnuson-Moss Warranty – Federal Trade Commission Improvement Act, 15 U.S.C. § 2301 et seq.

---

### *Software License*

By using this equipment, and/or installing or using any of the software associated with the same, you indicate your acceptance of each of the terms of this license. Upon acceptance, this license will be a legally binding agreement between you and MSI. The terms of this license apply to you and to any subsequent user of the software. If you do not agree to all of the terms of this license (i) do not install or use the software and (ii) return the equipment and the software (collectively, equipment), including all components, documentation and any other materials provided with the equipment, to MSI. The software includes associated media, any printed materials, and any on-line or electronic documentation. Software provided by third parties may be subject to separate end-user license agreements from the manufacturers of such software. This license shall also apply to any updates, bug fixes, or newer versions of the software provided by MSI for use with this equipment.

You may: (1) Use the software only in connection with the operation of the equipment; (2) Transfer the software (including all component parts and printed materials) permanently to another person, but only if the person agrees to accept all of the terms of this license. If you transfer the software, you must at the same time transfer the equipment and all copies of the software (if applicable) to the same person or destroy any copies not transferred; and (3) Terminate this license by destroying the original and all copies of the software (if applicable) in whatever form.

You may not: (1) Loan, distribute, rent, lease, give, sublicense or otherwise transfer the software, in whole or in part, to any other person, except as permitted under the transfer paragraph above; (2) Copy or translate the User Guide included with the equipment; (3) Copy, alter, translate, decompile, disassemble or reverse engineer the software, including but not limited to, modifying the software to

make it operate on non-compatible hardware; or (4) Remove, alter or cause not to be displayed, any copyright notices or startup message contained in the software programs or documentation

Title to the software, including the ownership of all copyrights, patents, trademarks and all other intellectual property rights subsisting in the foregoing, and all adaptations to and modifications of the foregoing shall at all times remain with MSI and its third party licensors, if any. MSI retains all rights not expressly licensed under this license. Except as otherwise expressly provided in this license, the copying, reproduction, distribution or preparation of derivative works of the software, or any portion of the equipment, is strictly prohibited. Nothing in this license constitutes a waiver by MSI of its rights under United States copyright law.

---

### ***Protection of Intellectual Property***

The equipment and its incorporated technology (collectively referred to herein as the Technology), is protected under issued and pending patents. The Technology is the valuable and proprietary technology, including trade secret technology, belonging to MSI. Much of the Technology is nonpublic and confidential. As our customer, you agree to further assist MSI in the protection of our intellectual property as follows: You agree to keep the Technology you receive confidential at all times, and shall not, without the prior written consent of MSI, disclose the Technology, in whole or in part, to any person outside of your company. You further agree that you shall not reverse engineer, disassemble, decompile, or copy the Technology without the prior written consent of MSI.

In addition, you agree that the equipment will not be used to manufacture anything other than products in which you hold intellectual property rights free of infringement of others. You may not use the equipment to manufacture any product infringing on another's patented rights. By accepting and using the equipment, you agree to defend and indemnify Machine Solutions, Inc., its officers, directors, employees and agents, from and against any claims of infringement as a result of your use of the equipment.

---

### ***Regulatory Matters***

All equipment validations, product validation, final product QC testing and other testing required by the U.S Food and Drug Administration are the sole responsibility of the customer. Machine Solutions, Inc. shall have no responsibility or liability for the performance of any interventional product on which this equipment is used.

## APPENDIX A

### Omega Platinum Temperature Controllers

**ATTENTION:** The initialization portion of the Omega Temperature Controller(s) has been password-protected. Some reasons for this practice to be implemented are:

- Prevent unauthorized Access.
- Avoid Tampering.
- Mitigate user errors.
- User accountability.

For additional information, please contact [service@machinesolutions.com](mailto:service@machinesolutions.com)

### *Temperature Controller Layout and Description of Button Actions*

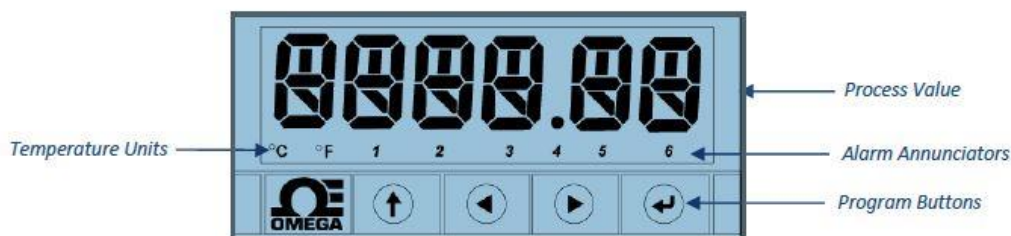


Figure A-1. Controller Layout





-  The UP button moves up a level in the menu structure. Pressing and holding the UP button navigates to the top level of any menu (oPER, PRoG, or INIt). This can be useful if you get lost in the menu structure.
-  The LEFT button moves across a set of menu choices at a given level (up in the Section 4 menu structure tables). When changing numerical settings, press the LEFT button to make the next digit (one digit to the left) active.
-  The RIGHT button moves across a set of menu choices at a given level (down in the Section 4 menu structure tables). The RIGHT button also scrolls numerical values up with overflow to 0 for the flashing digit selected.
-  The ENTER button selects a menu item and goes down a level, or it enters a numerical value or parameter choice.

Figure A-2. Description of Button Actions

<b>INIt</b>	Initialization Mode: These settings are rarely changed after initial setup. They include transducer types, calibration, etc.
<b>PRoG</b>	Programming Mode: These settings are frequently changed. They include Set points, Control Modes, Alarms, etc.
<b>oPER</b>	Operating Mode: This mode allows users to switch between Run Mode, Standby Mode, Manual Mode, etc.

**Figure A-3. Level 1 Menu**

---

## ***Auto Tune Temperature Controller(s)***

**Please note, the Omega temperature controllers have been auto tuned and are set for optimal performance. Contact Machine Solutions for further diagnostics and instructions.**











The Autotune function will select the tuning algorithm depending on the stability of current process and the error difference between current process and the Control Setpoint (SP1). If the process is relatively stable (i.e: at room temperature), a bump test will be performed to determine the plant characteristics. If the process is hot, or if the process is within 10% of Control Setpoint, limit cycle oscillation will be performed with the tuning setpoint taken at the process value when the Autotune function is triggered. Autotuning may be performed as many times as needed or when the operating conditions (i.e: process load, or setpoint) have changed significantly. To obtain good tuning results, ensure the process is stable prior to triggering autotune function. The process is stable when it is at ambient temperature, or it is tracking Control Setpoint (SP1) in auto mode.

**Note: Ensure the temperature is at room temperature prior to starting the Auto Tune process.**

Use the P<sub>RoG</sub> (Programming Mode) Menu for Steps 1-7












1. Setpoint 1 Configuration (P<sub>RoG</sub> > SP1 > #)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
SP1	_____						Process goal for PID

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIt, P<sub>RoG</sub>, and oPER</b>
 	Navigate to <b>P<sub>RoG</sub></b> (Programming Mode).
	Select <b>P<sub>RoG</sub></b> .
 	Navigate to <b>SP1</b> (Setpoint 1 parameter).
	Select the <b>SP1</b> .
 	Set the process goal value.
	Confirm the value.







2. (P<sub>RoG</sub>> PId > A.to > 5.00)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
PId	A.to	5.00					Set timeout time for autotune

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIt, P<sub>RoG</sub>, and oPER</b>
 	Navigate to <b>P<sub>RoG</sub></b> (Programming Mode).
	Select <b>P<sub>RoG</sub></b> .
 	Navigate to <b>PId</b> .
	Select <b>PId</b> .
 	Navigate to <b>A.to</b> .
	Select <b>A.to</b>
	Set to <b>5.00</b> minutes or above

3. (PRoG> PId > GAIN > \_P\_ > **2.77**)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
PId	GAIN	_P_	<b>2.77</b>				Manual Proportional Band setting

	Navigate back to level 3 by pushing the  button.
	Navigate to <b>GAIN</b> .
	Select <b>GAIN</b> .
	Navigate to <b>_P_</b>
	Select <b>_P_</b>
	Enter <b>2.77</b>

4. (PRoG > PId > GAIN > \_I\_ > **0.08**)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
PId	GAIN	_I_	<b>0.08</b>				Manual Integral Factor setting

	Navigate to <b>_I_</b>
	Select <b>_I_</b>
	Enter <b>0.08</b>

5. (PRoG> PId > GAIN > \_d\_ > **23.87**)






Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
PId	GAIN	_d_	<b>23.87</b>				Manual Derivative Factor setting

	Navigate to <b>_d_</b>
	Select <b>_d_</b>
	Enter <b>23.87</b>



6. (PRoG > PId > AdPt > **ENbL**)





Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
PId	AdPt	<b>ENbL</b>					Enable fuzzy logic adaptive tuning

	Navigate back to level 3 by pushing the  button.
	Navigate to <b>AdPt</b>
	Select <b>AdPt</b>
	Navigate to <b>ENbL</b>
	Select <b>ENbL</b>

**To Begin AutoTune**

7. (PRoG > PId > tUNE > **StRt**)














Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
PId	tUNE	<b>StRt</b>					Enable fuzzy logic adaptive tuning

	Navigate back to level 3 by pushing the  button.
	Navigate to <b>tUNE</b>
	Select <b>tUNE</b>
	Select <b>StRt</b>
	<b>Auto Tune starts and displays DONE when completed.</b>

## *Changing Temperature Units on the Temperature Controller*

Use Initialization Mode (INIt > RdG > °F °C > °F)








Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
RdG	°F°C	°F					

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIt, PRoG, and oPER</b>
	Navigate to <b>INIt</b> (Initialization Mode).
	Select <b>INIt</b> .
	Navigate to <b>RdG</b> (Reading Formats).
	Select <b>RdG</b> .
	Navigate to <b>°F°C</b> (Temperature Units).
	Select <b>°F°C</b> .
	Navigate to <b>°F</b>
	Select <b>°F</b>
	Select up button to go back to level 1
	Navigate to <b>oPER</b>
	Select <b>oPER</b>
	"RUN" will be displayed.
	Back to temperature readout and normal operating status.

### ***Resetting the Temperature Controller(s) back to factory defaults.***

To reset the Omega controller to factory defaults, enter the INIt (Initialization Mode) Menu and follow the steps below.

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
F.dFt	ok?						ENTER resets to factory defaults














	<b>Note:</b> If not at Level 1, push the  button to get to that level. <b>Level 1 = INIt, PRoG, and oPER</b>
	Navigate to <b>INIt</b> (Initialization Mode).
	Select <b>INIt</b>
	Navigate to <b>F.dFt</b>
	Select <b>F.dFt</b>
	Navigate to <b>ok?</b>
	Select <b>ok?</b>
	<b>The controller will now be reset. Next, enter the following MSI settings in red.</b>

## ***Resetting the Temperature Controller(s) back to MSI settings.***

Use Initialization Mode to set the following parameters 1-7.














1. Thermocouple Input Type (INIt > INPt > t.C. > k)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
INPt	t.C.	k					Type K thermocouple

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIt, PRoG, and oPER</b>
 	Navigate to <b>INIt</b> (Initialization Mode).
	Select <b>INIt</b> .
 	Navigate to <b>INPt</b> (Input parameter).
	Select <b>INPt</b> .
 	Navigate to <b>t.C.</b> (thermocouple).
	Select <b>t.C.</b>
 	Navigate to the <b>K</b> thermocouple type.
	Select <b>k</b> .










2. Decimal Point Format (INIt > RdG > dEC.P > FFF.F)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
RdG	dEC.P	FFF.F					Reading format -999.9 to +999.9

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIt, PRoG, and oPER</b>
 	Navigate to <b>INIt</b> (Initialization Mode).
	Select <b>INIt</b> .
 	Navigate to <b>RdG</b> (Reading Formats).
	Select <b>RdG</b> .
 	Navigate to <b>dEC.P</b> (Decimal-point Format).
	Select <b>dEC.P</b> .
 	Navigate to <b>FFF.F</b> (One decimal place).
	Select <b>FFF.F</b> .










### 3. Temperature Units (INIt > RdG > °F°C > °C)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
RdG	°F°C	°C					Degrees Celsius annunciator

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIt, PRoG, and oPER</b>
	Navigate to <b>INIt</b> (Initialization Mode).
	Select <b>INIt</b> .
	Navigate to <b>RdG</b> (Reading Formats).
	Select <b>RdG</b> .
	Navigate to <b>°F°C</b> (Temperature Units).
	<ul style="list-style-type: none"> <li>• °C - Degrees Celsius (factory default), °C annunciator turned on</li> <li>• °F - Degrees Fahrenheit, °F annunciator turned on</li> </ul>
	Select <b>°F°C</b> .
	Navigate to <b>°C</b>
	Select <b>°C</b>










### 4. Filter (INIt > RdG > FLtR > 8)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
RdG	FLtR	8					Readings per displayed value: 8

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIt, PRoG, and oPER</b>
	Navigate to <b>INIt</b> (Initialization Mode).
	Select <b>INIt</b> .
	Navigate to <b>RdG</b> (Reading Formats).
	Select <b>RdG</b> .
	Navigate to the <b>FLtR</b> (Filter parameter).
	Select <b>FLtR</b> .
	Navigate to <b>8</b> (0.4 s).
	Select <b>8</b> .










5. Normal Color (INIt > RdG > NCLR > GRN)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
RdG	NCLR	GRN					Default display color: Green

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIt, PRoG, and oPER</b>
	Navigate to <b>INIt</b> (Initialization Mode).
	Select <b>INIt</b> .
	Navigate to <b>RdG</b> (Reading Formats).
	Select <b>RdG</b> .
	Navigate to <b>NCLR</b> (Normal Color parameter).
	Select <b>NCLR</b> .
	Navigate to <b>GRN (Green)</b> .
	Select <b>GRN</b> .

6. Brightness (INIt > RdG > bRGt > HIGH) Brightness setting = HIGH










Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
RdG	bRGt	HIGH					High display brightness

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIt, PRoG, and oPER</b>
	Navigate to <b>INIt</b> (Initialization Mode).
	Select <b>INIt</b> .
	Navigate to <b>RdG</b> (Reading Formats).
	Select <b>RdG</b> .
	Navigate to <b>bRGt</b> (Brightness parameter).
	Select <b>bRGt</b> .
	Navigate to <b>HIGH</b> (High display brightness).
	Select <b>HIGH</b> .

## Equipment User Manual

### 7. Safety Features (INIt > SFty > PwoN > RSM)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
SFty	PwoN	RSM					RUN on power up if not previously faulted

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIt, PRoG, and oPER</b>
	Navigate to <b>INIt</b> (Initialization Mode).
	Select <b>INIt</b> .
	Navigate to <b>SFty</b> (Safety Features).
	Select <b>SFty</b> .
	Navigate to <b>PwoN</b> (Power On Confirmation parameter).
	<b>Note: PwoN – Requires confirmation before running automatically at startup</b> Select <b>PwoN</b> .
	Navigate to <b>RSM</b> .
	<b>Note: RSM – Program runs automatically at startup if not previously in fault state.</b> Select <b>RSM</b> .











### 8. Configure the USB port

CoMM	USb						Configure the USB port
------	-----	--	--	--	--	--	------------------------

Use Programming Mode (PRoG) to set the following parameters 9-14.

9. Setpoint 1 Configuration (PRoG > SP1 > #)








Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
SP1	_____						Process goal for PID

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIT, PRoG, and oPER</b>
 	Navigate to <b>PRoG</b> (Programming Mode).
	Select <b>PRoG</b> .
 	Navigate to <b>SP1</b> (Setpoint 1 parameter).
	Select the <b>SP1</b> .
 	Set the process goal value.
	Confirm the value.

Sections 10-12 are set for all models except 220B, 320B, 43B, and TF-120  
For models 220B, 320B, 43B, and TF-120 skip to Section 13

10. Alarm High/Low setting (PRoG > ALM.1, ALM.2 > type > HI.Lo)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
ALM.1	<b>Note: This submenu is the same for all other Alarm configurations.</b>						
	tyPE						
		HI.Lo.					Alarm: process value outside Alarm triggers

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIT, PRoG, and oPER</b>
 	Navigate to <b>PRoG</b> (Programming Mode).
	Select <b>PRoG</b> .
 	Navigate to <b>ALM.1</b> (Alarm Configuration 1). <b>Note: Select Alarm Configuration to set up, change, enable, or disable Alarms. Either or both Alarms can be assigned to trigger display color changes, annunciators, and / or outputs. Either or both Alarm configurations can be assigned to multiple outputs. The ALM.1 and ALM.2 configuration menus have all the same settings and function in the same manner.</b>
	Select <b>ALM.1</b> .



## Equipment User Manual

	Navigate to <b>tyPE</b> (Alarm Type Parameter). <b>Note: This parameter will control the basic behavior of the selected alarm.</b>
	Select <b>tyPE</b> .
	Navigate to <b>HILO</b>
	Select <b>HILO</b>

### 11. Alarm high, low, color reference parameters

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
ALM.1	ALR.H	<u>2.5</u>					Alarm high parameter for trigger calculations
ALM.1	ALR.L	<u>2.5</u>					Alarm low parameter for trigger calculations
ALM.1	A.CLR	REd					Red display when Alarm is active

#### Alarm High Reference (PRoG > ALM.1 > ALR.H)

	Follow Steps in Section 10. <b>Note: After selecting HI.Lo setting, tyPE parameter should be showing in window.</b>
	Navigate to <b>ALR.H</b> (Alarm High Reference parameter).
	Select <b>ALR.H</b> .
	Set the Alarm High Reference value = 2.5
	<b>Note: One arrow moves the digit and the other moves the value.</b>
	Confirm the value.

#### Alarm Low Reference (PRoG > ALM.1 > ALR.L)

	Follow Steps in Section 10. <b>Note: After selecting HI.Lo setting, tyPE parameter should be showing in window.</b>
	Navigate to <b>ALR.L</b> (Alarm Low Reference parameter).
	Select <b>ALR.L</b> .
	Set the Alarm Low Reference value = 2.5
	<b>Note: One arrow moves the digit and the other moves the value.</b>
	Confirm the value.














#### Alarm Color (PRoG > ALM.1 > A.CLR > REd)

	Follow Steps in Section 10. <b>Note: After selecting HI.Lo setting, tyPE parameter should be showing in window.</b>
	Navigate to <b>A.CLR</b> (Alarm Color parameter).
	Select <b>A.CLR</b> .
	Navigate to <b>REd</b> (Alarm conditions are displayed in red).

	Select the <b>REd</b> .
---	-------------------------

12. Output as Alarm 1 (PRoG > dtR1 > ModE > ALM.1)









Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
dtR.1							dtR.1 is replaced by output type. For example: oUt#
	ModE		Note: This submenu is the same for all other outputs.				
		ALM.1					Output is an Alarm using ALM.1 configuration

	<b>Note: If not at Level 1, push the  button to get to that level.</b> <b>Level 1 = INIt, PRoG, and oPER</b>
 	Navigate to <b>PRoG</b> (Programming Mode).
	Select <b>PRoG</b> .
 	Navigate to <b>dtR1</b> (Double Throw Mechanical Relay number 1). <b>Note: All output channels have the same menu structure. However, only those parameters that apply for the type of output being configured appear in that output's menu.</b>
	Select <b>dtR1</b> .
 	Navigate to <b>ModE</b> . <b>Note: ModE – Allows the output to be set up as a control, Alarm, retransmission, or Ramp/Soak event output; the output can also be turned off.</b>
	Select <b>ModE</b> .
 	Navigate to <b>ALM.1</b> . <b>Note: ALM.1 – Set the output to be an Alarm using the ALM.1 configuration</b>
	Select <b>ALM.1</b> .

**Section 13 is for Models 220B, 320B, 43B, and TF-120**










13. Turn Off Output Channel (PRoG > dtR1 > ModE > oFF)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
dtR.1	ModE	oFF					Output does nothing

	<p><b>Note:</b> If not at Level 1, push the  button to get to that level.</p> <p><b>Level 1 = INIt, PRoG, and oPER</b></p>
	Navigate to <b>PRoG</b> (Programming Mode).
	Select <b>PRoG</b> .
	Navigate to <b>dtR1</b> (Double Throw Mechanical Relay number 1).
	<p><b>Note:</b> All output channels have the same menu structure. However, only those parameters that apply for the type of output being configured appear in that output's menu.</p>
	Navigate to <b>ModE</b> .
	<p><b>Note:</b> <b>ModE</b> – Allows the output to be set up as a control, Alarm, retransmission, or Ramp/Soak event output; the output can also be turned off.</p>
	Select <b>ModE</b> .
	Navigate to <b>oFF</b> .
	<p><b>Note:</b> <b>oFF</b> – Turn off the output channel</p>
	Select <b>oFF</b> .

14. PID Control Mode (PRoG > dc.1 > ModE > PId)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
dc.1							dc.1 is replaced by output type. For example: oUt#
	ModE						
		PId					PID Control Mode

	<b>Note:</b> If not at Level 1, push the  button to get to that level. <b>Level 1 = INIt, PRoG, and oPER</b>
	Navigate to <b>PRoG</b> (Programming Mode).
	Select <b>PRoG</b> .
	Navigate to <b>dc1</b> (DC Pulse output number 1). <b>Note:</b> All output channels have the same menu structure. However, only those parameters that apply for the type of output being configured appear in that output's menu.
	Select <b>dc1</b> .
	Navigate to <b>ModE</b> . <b>Note:</b> ModE – Allows the output to be set up as a control, Alarm, retransmission, or Ramp/Soak event output; the output can also be turned off.
	Select <b>ModE</b> .
	Navigate to <b>PId</b> . <b>Note:</b> PId - Set the output to Proportional-Integral-Derivative (PID) Control Mode.
	Select <b>PId</b> .

15. Increase to SP1 (PRoG > PLD > ACtN > RVRS)

Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Notes
Pld	ACtN	RVRS					Increase to <b>SP1</b> (i.e., heating)

	<b>Note: If not at Level 1, push the ↑ button to get to that level. Level 1 = INIt, PRoG, and oPER</b>
◀◀	Navigate to <b>PRoG</b> (Programming Mode).
☑	Select <b>PRoG</b> .
▶▶	Navigate to <b>Pld</b> . <b>Note: Pld – Set the output to Proportional-Integral-Derivative (PID) Control Mode</b>
☑	Select <b>Pld</b> .
◀▶	Navigate to <b>ACtN</b> . <b>Note: ACtN – Determines the action direction for control</b>
☑	Select <b>ACtN</b> .
◀▶	Navigate to <b>RVRS</b> . <b>Note: RVRS – Off when Process Value is &gt; Setpoint, and on when Process Value is &lt; Setpoint (e.g., heating); deadband is applied below Setpoint (factory default)</b>
☑	Select <b>RVRS</b> .

A full description of features can be found here: <https://assets.omega.com/manuals/M5451.pdf>.