

MACHINE SOLUTIONS INC.



USER MANUAL

BEAHM DESIGNS TUBE FLARE MODEL TF-120



BEAHM
DESIGNS

Machine Solutions Inc. 2951 W. Shamrell Blvd. Flagstaff, Arizona 86005 USA

Tel: 928-556-3109

Service@machinesolutions.com

• Fax: 928-556-3084

• www.machinesolutions.com

The Machine Solutions Inc. products shown and described in this catalog may be covered by one or more of the following US Patents: #6,629,350, #6,968,607, #6,925,847, #6,988,881, #6,931,899 and #7,069,794. Other US and International Patents Pending.

Machine Solutions, MSI, and TF-120 are trademarks or service marks of Machine Solutions Inc. Copyright (©) Machine Solutions Inc. All Rights Reserved.

Product images are representative of standard equipment offerings and may differ from delivered equipment.

TABLE OF CONTENTS

| | |
|---|----|
| Table Of Contents | 3 |
| List Of Figures..... | 4 |
| List Of Tables | 4 |
| Welcome..... | 5 |
| Machine Description | 5 |
| Safety | 5 |
| User Alerts | 6 |
| Installation | 6 |
| Controls and Features | 7 |
| Run Process..... | 9 |
| Operation | 9 |
| Shut Down..... | 9 |
| Parameter Settings | 10 |
| Temperature Controller | 10 |
| Omron Temperature Controller | 11 |
| Setting Temperature Controller Parameters | 11 |
| Autotuning Temperature Controller | 11 |
| Configuration of Temperature Controller Alarm | 13 |
| Setting Temperature Controller Offset..... | 14 |
| OMEGA PLATINUM TEMPERATURE CONTROLLER | 15 |
| Adjusting Temperature on Temperature Controller(s)..... | 15 |
| Resetting the Temperature Controller | 15 |
| Eurotherm Temperature Controller Model 3216..... | 16 |
| Auto-Tuning | 16 |
| Switching from Fahrenheit to Celsius | 16 |
| Maintenance..... | 17 |
| Cleaning..... | 17 |
| Flare Tip Replacement | 17 |
| Fuse Replacement..... | 17 |
| Diagnostics And Troubleshooting..... | 20 |
| Specifications | 21 |

| | |
|--|----|
| Facility Requirements | 21 |
| Critical Parts | 22 |
| Customer Support And Satisfaction..... | 23 |
| Warranty And Limitations..... | 24 |
| Appendix A..... | 26 |
| Temperature Controller Layout and Description of Button Actions | 26 |
| Auto Tune Temperature Controller(s) | 27 |
| Changing Temperature Units on the Temperature Controller | 31 |
| Resetting the Temperature Controller(s) back to factory defaults. | 32 |
| Resetting the Temperature Controller(s) back to MSI settings. | 33 |

LIST OF FIGURES

| | |
|---|----|
| Figure 1. TF-120 Front Panel | 7 |
| Figure 2. TF-120 Back Panel | 8 |
| Figure 3. Omron E5GC Temperature Controller | 11 |
| Figure 4. Auto Tune Enable..... | 12 |
| Figure 5. Temperature Alarm Setup | 13 |
| Figure 6. Temperature Offset | 14 |
| Figure 7. Removing Fuse Insert..... | 18 |
| Figure 8. Fuse Replacement..... | 18 |
| Figure 9. Fuse Insert Replacement..... | 19 |

LIST OF TABLES

| | |
|--|----|
| Table 1. Front Panel Control and Display Functions | 7 |
| Table 2. Back Panel Control and Display Functions | 8 |
| Table 3. Diagnostics and Troubleshooting..... | 20 |
| Table 4. System Specifications | 21 |
| Table 5. Critical Parts List | 22 |

WELCOME

Machine Solutions, Inc. (MSI) would like to take this opportunity to thank you for purchasing your new TF-120 Tube Flaring machine. At MSI, we are dedicated to bringing innovative process development solutions to both medical device and nonmedical organizations. MSI looks forward to helping your organization provide life-improving devices to your customers, today and tomorrow.

MACHINE DESCRIPTION

The Beahm Designs Inc. Model TF-120 is a system designed to accommodate interchangeable tip sizes. This unit allows you to flare or expand the ID of PTFE sheaths, and other thermoplastic tubing and is equipped with a foot pedal actuated cooling line to set the shape in the material. Thermocouple feedback ensures stable temperature set points.

SAFETY

- Place the system on a level, sturdy surface at an ergonomically viable height for the user.
- Use of eye protection when working with compressed gases and heated materials is advised.
- The maximum observed Sound Pressure Level is below 70 dBA.
- Tips will become hot during operation and, depending on temperature set point, can cause severe skin burns if contact occurs.



Caution: high voltage. Remove power and use safety precautions when servicing.



Caution: hot surface. Contact may cause burn. Allow to cool before servicing.



Caution: pinch point. Keep hands and body parts clear while in operation.

USER ALERTS

Do not use or otherwise operate the machine in any manner other than that in which it is explicitly intended. Examples: Do not attempt to sit on or climb on the equipment, do not place heavy objects or containers of liquid on the machine, do not to insert any foreign objects into the machine and do not attempt to bypass any guards.

Note: The equipment is not for use with materials that can decompose or ignite below the maximum operating temperature of the machine. Hazards are materials that outgas hazardous substances and or ignite. (260°C/500°F).

Note: This equipment is not for use in an ATEX environment.

INSTALLATION

Note: Ensure the system power switch is in the off position

1. Place the system on a level, sturdy surface.
2. Connect the system air extension line to 80—100 psi clean dry compressed air source.
3. Connect main AC power to the power entry module on the rear panel.

CONTROLS AND FEATURES

Located on the front and rear panels are the following controls and/or displays and their function.



Figure 1. TF-120 Front Panel

Table 1. Front Panel Control and Display Functions

| Item | Function |
|------|---------------------------------|
| 1 | Cools product after processing |
| 2 | Controls cooling air flow rate |
| 3 | Toggles cooling air on and off |
| 4 | Controls the air temperature |
| 5 | Toggles system power on and off |

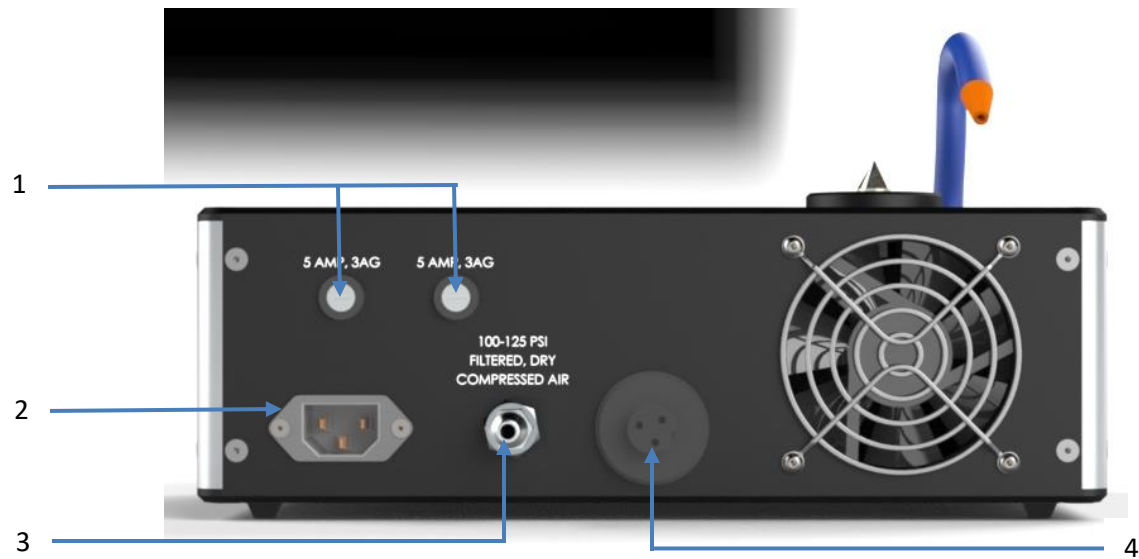


Figure 2. TF-120 Back Panel

Table 2. Back Panel Control and Display Functions

| Item | Function |
|------|---------------------------------|
| 1 | Protects power distribution |
| 2 | Connects to power cord |
| 3 | Controls system air supply |
| 4 | Allows connection to foot pedal |

RUN PROCESS

Warning: Avoid skin contact with the flare tip as injury may occur.

Operation

- Switch Main Power on.
 - Set desired die temperature (Refer to Page 8, Omega Platinum Temperature Controller).
 - Position component to be processed at the center of the tip of the flare tool press tubing onto tool until the desired amount of flare is achieved then depress the foot pedal or toggle the cooling air switch briefly to cool and set shape.
 - Upon completion of flare, remove the product from the flare tooling.
-

Shut Down

- Switch System Power off.

PARAMETER SETTINGS

Temperature Controller

Note: Verify what model temperature controller is on the machine.

- Refer to page 11, Omron Temperature Controller.
- Refer to page 15, Omega Platinum Temperature Controller.
- Refer to page 16, Eurotherm Temperature Controller.

OMRON TEMPERATURE CONTROLLER

Note: Verify what model temperature controller is on the machine

The parameter settings for the temperature controllers have been pre-configured prior to shipment from Machine Solutions, Inc. However, if further details are required, refer to the Omron operating instructions for the model-E5GC temperature controllers included with the manufacturer's literature (delivered with the machine).



Figure 3. Omron E5GC Temperature Controller

Setting Temperature Controller Parameters

The parameter settings, as defined by Machine Solutions, Inc. for specific operational functionality of the individual temperature control units, are detailed below. It is recommended that these parameter settings remain as they appear in the sections to follow. If parameters are changed incorrectly and cannot be restored, please contact service@machinesolutions.com.

Autotuning Temperature Controller

Re-tune the temperature controller if dies are changed or modified, or to correct instability at process temperature.

1. Start with machine at ambient temperature.
2. Power on the machine. Ensure the heater switch (if applicable) is switched to "off" for the next two steps. If machine is not equipped with heater switch, ensure steps are completed quickly to minimize pre-heating.
3. Set controller to process temperature.
4. Follow the procedure shown in Figure 4.
5. If applicable, switch heater switch to "on" once controller is back to home screen. Controller will wait for temperature to stabilize before starting.

Note: Autotune is active when light next to "TUNE" is lit. The procedure may take up to 30 minutes.

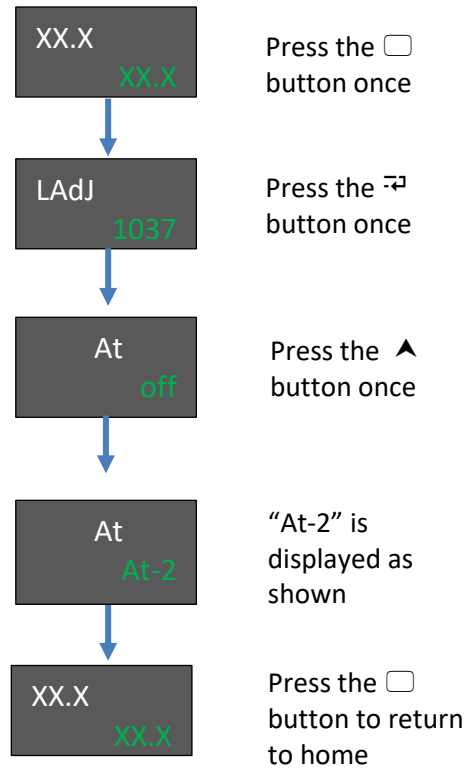


Figure 4. Auto Tune Enable

Configuration of Temperature Controller Alarm

Even after a successful autotune, temperatures may still have a small degree of instability. Temperatures may also drop unexpectedly if there is a fault with the equipment or if accessories are accidentally unplugged. To ensure the equipment notifies operators in the case of an unexpected temperature change, the temperature controllers are programmed with an alarm. Machine Solutions, Inc. recommends a temperature tolerance of $\pm 2.5^{\circ}\text{F}$, allowing the temperature to either rise or drop by as much as 2.5°F before the alarm activates. The procedure for configuring the temperature controller alarm is outlined in Figure 5.

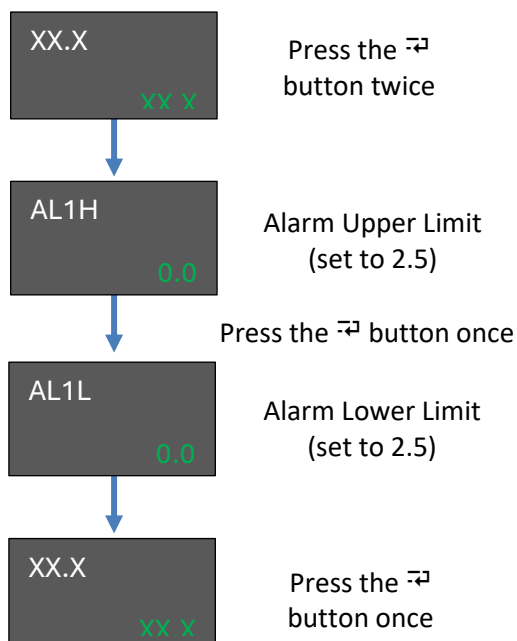


Figure 5. Temperature Alarm Setup

Setting Temperature Controller Offset

There may be a temperature disparity between the temperature controller readout and the actual temperature at the working surfaces of the machine's dies (measured with an external standard). A temperature offset may be desired to reduce or eliminate this disparity.

Offset range -199.9 to 999.9 °F/°C

The following diagram, Figure 6, shows the procedure for inputting a known temperature offset:

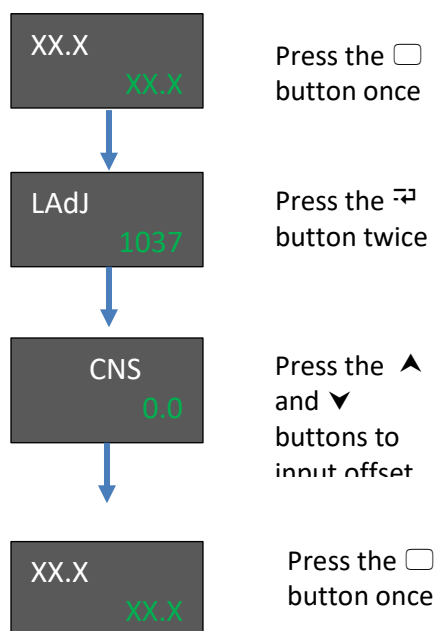


Figure 6. Temperature Offset

OMEGA PLATINUM TEMPERATURE CONTROLLER








Note: Verify what model temperature controller is on the machine.

ATTENTION: PRIOR TO MAKING ADJUSTMENTS, PLEASE SEE THE APPENDIX FOR FURTHER INFORMATION ABOUT THE OMEGA PLATINUM TEMPERATURE CONTROLLER. THE TEMPERATURE CONTROLLERS HAVE BEEN PRE-PROGRAMMED.

Adjusting Temperature on Temperature Controller(s)

Use the PRoG (Programming Mode) Menu

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|----------------------|
| SP1 | | | | | | | Process goal for PID |

| | |
|---|---|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIT, PRoG, and oPER |
|  | Navigate to PRoG (Programming Mode). |
|  | Select PRoG . |
|  | Navigate to SP1 (Setpoint 1 parameter). |
|  | Select the SP1 . |
|  | Set the desired temperature. |
|  | Confirm the value. The heaters will ramp to correct temperature. |

Resetting the Temperature Controller







Refer to Appendix A on page 26 for resetting the temperature controller and all temperature control settings.

EUROTHERM TEMPERATURE CONTROLLER MODEL 3216

Note: Verify what model temperature controller is on the machine.

Note: Auto-tuning can be performed at any temperature set point within the system operating specifications. This machine needs to be auto tuned at the temperature and air flow that your product will be processed at.

Auto-Tuning

1. Ensure heater power is off and heater is at room temperature.
2. Enter the process temperature setpoint using the  or  buttons.
3. Press  until **R.TUN** is displayed.
4. Press  or  to select On.
5. Press  to begin the auto tune process.
6. Turn heater power ON.

Please note, after following this sequence, auto tune can take several minutes to start and complete.

A full description of auto-tune and the purpose of other parameters in the level 2 list is given in the 3200 Manual located online at <https://www.eurotherm.com/download/3200-engineering-manual-ha028651-iss-15/>

Switching from Fahrenheit to Celsius

1. Press and hold the page button (left most) until Lev 1 appears.
2. Press up arrow to Lev 2 appears.
3. Press scroll to code 0.
4. Press up arrow key for code 2.
5. Press scroll button until units appear.
6. Press up or down arrow key to select C.

MAINTENANCE

Note: Ensure the machine is unplugged for any servicing or maintenance work.



Caution: pinch point/crush hazard. Keep fingers, hands, and clothing clear of moving parts.



Caution: hot surface. Contact may cause burn. Allow to cool before servicing.

Caution: Ensure the conical tip cooled to within 15°F of ambient temperature before proceeding with replacement.

Cleaning

1. Use 99% isopropyl alcohol to wipe down the outside of the machine. Do not attempt to clean the inside of the machine. The machine should not be washed down.
2. Cleaning should be with a soft dry cloth only.

Flare Tip Replacement

1. Grasp the conical tip and rotate counterclockwise (standard threads) to remove the tip.
2. Install replacement tip by threading it onto the heater post.

Fuse Replacement

1. To replace a blown fuse, turn off machine power by unplugging the power cord from the machine.
2. Remove the insert.
 - a. Using a flat head screwdriver, push the fuse insert inward and turn counterclockwise to release.



Figure 7. Removing Fuse Insert

3. Fuse replacement.
 - a. Remove the old fuse and replace it with the new one.



Figure 8. Fuse Replacement

4. Insert replacement.
 - a. Using a flat head screwdriver, seat the insert by pushing inward and turning clockwise.



Figure 9. Fuse Insert Replacement

DIAGNOSTICS AND TROUBLESHOOTING

Table 3. Diagnostics and Troubleshooting

| Issue | Possible Causes | Solution |
|--|---|---|
| Temperature not stable | <ul style="list-style-type: none"> • Thermocouple loose | <ul style="list-style-type: none"> • Auto-tune (MSI recommends auto-tune to process temperature starting from ambient temperature.) • Re-install thermocouple |
| “S.ERR” displayed (Omron temperature controller) | <ul style="list-style-type: none"> • T.C sensor break | <ul style="list-style-type: none"> • Replace thermocouple • Verify complete T.C. path |
| “Open” displayed (Omega temperature controller) | | |
| “S.br” displayed (Eurotherm temperature controller) | | |
| No heat at Die | <ul style="list-style-type: none"> • Defective heating element • Defective power control | <ul style="list-style-type: none"> • Replace heating element |
| .Err code in display | <ul style="list-style-type: none"> • Temperature controller software failure | <ul style="list-style-type: none"> • Replace/Reprogram temperature controller |
| System will not power on | <ul style="list-style-type: none"> • IEC power cord not fully Connected • Fuse needs to be replaced | <ul style="list-style-type: none"> • Verify installation • Replace fuse |

SPECIFICATIONS

Table 4. System Specifications

| Description | Range | Accuracy |
|-------------|---------------|----------|
| Temperature | Ambient-500°F | ± 2 °F |

Facility Requirements

- Voltage: 120-240 VAC, 50/60 hz
- Wattage: 10 amps (500 watts)
- Compressed Air: 100-125 psi, clean dry compressed air

CRITICAL PARTS

For replacement or spare parts, please contact us at service@machinesolutions.com, or call 928-556-3109.

Table 5. Critical Parts List

| Part Number | Description | Quantity |
|--------------------|-------------------------|----------|
| 120V - 1153590-001 | HEATER | 1 |
| 240V - 1157788-001 | | 1 |
| 1143133-001 | THERMOCOUPLE | 1 |
| 1161899-001 | CONTROLLER, TEMP, OMEGA | 1 |
| 110114-002 | CONTROLLER, TEMP, OMRON | 1 |
| 1114668-005 | POWER SUPPLY | 1 |
| 1343250-001 | MAC VALVE | 1 |
| 110092-001 | FUSE | 2 |

CUSTOMER SUPPORT AND SATISFACTION

Machine Solutions Inc. is proud of the advanced engineering and quality construction of each piece of equipment that we build. It is our goal to provide equipment that exceeds the expectations of the customer. By implementing the highest standards and applying our experience to provide a quality product, we maintain an ongoing, positive working relationship with all our customers.

Machine Solutions Inc. welcomes your comments and inquiries about our products and services.

Machine Solutions Inc.
2951 West Shamrell Blvd., Suite 107
Flagstaff, AZ 86005

Phone: 928-556-3109
Fax: 928-556-3084
E-Mail: Service@MachineSolutions.com

WARRANTY AND LIMITATIONS

General Warranty

Machine Solutions Inc. (MSI) warrants its products to be free from defects in material and workmanship in normal everyday use and service for a period of one year from the date of shipment from the factory in Flagstaff, Arizona. MSI's obligation under this warranty shall be limited to the repairing or replacing of the product or parts thereof which upon MSI's inspection reveals them to be defective. MSI reserves the right and option to refund the purchase price in lieu of repair or replacement upon evaluation of the returned original part. Modifications, misuse, attempted repairs by others, improper calibration or operation shall render this guarantee null and void. MSI MAKES NO OTHER WARRANTY REGARDING THIS PRODUCT, INCLUDING ANY EXPRESS OR IMPLIED WARRANTY. SPECIFICALLY, THERE IS NO WARRANTY OF MERCHANTABILITY OF THIS PRODUCT OR OF THE FITNESS OF THE PRODUCT FOR ANY PURPOSES. THE SUITABILITY OF THIS PRODUCT FOR ANY PURPOSE PARTICULAR TO THE CUSTOMER IS FOR THE CUSTOMER, IN ITS SOLE JUDGEMENT, TO DETERMINE. MACHINE SOLUTIONS, INC. ASSUMES NO RESPONSIBILITY FOR THE SELECTION OR USE OF THIS PRODUCT BY CUSTOMER. This product has not been tested or approved by the U.S. Food and Drug Administration or any other agency of the U.S. government. This product is not a consumer product as that term is defined in the Magnuson-Moss Warranty – Federal Trade Commission Improvement Act, 15 U.S.C. § 2301 et seq.

Software License

By using this equipment, and/or installing or using any of the software associated with the same, you indicate your acceptance of each of the terms of this license. Upon acceptance, this license will be a legally binding agreement between you and MSI. The terms of this license apply to you and to any subsequent user of the software. If you do not agree to all of the terms of this license (i) do not install or use the software and (ii) return the equipment and the software (collectively, equipment), including all components, documentation and any other materials provided with the equipment, to MSI. The software includes associated media, any printed materials, and any on-line or electronic documentation. Software provided by third parties may be subject to separate end-user license agreements from the manufacturers of such software. This license shall also apply to any updates, bug fixes, or newer versions of the software provided by MSI for use with this equipment.

You may: (1) Use the software only in connection with the operation of the equipment; (2) Transfer the software (including all component parts and printed materials) permanently to another person, but only if the person agrees to accept all of the terms of this license. If you transfer the software, you must at the same time transfer the equipment and all copies of the software (if applicable) to the same person or destroy any copies not transferred; and (3) Terminate this license by destroying the original and all copies of the software (if applicable) in whatever form.

You may not: (1) Loan, distribute, rent, lease, give, sublicense or otherwise transfer the software, in whole or in part, to any other person, except as permitted under the transfer paragraph above; (2) Copy or translate the User Guide included with the equipment; (3) Copy, alter, translate, decompile, disassemble or reverse engineer the software, including but not limited to, modifying the software to

make it operate on non-compatible hardware; or (4) Remove, alter or cause not to be displayed, any copyright notices or startup message contained in the software programs or documentation

Title to the software, including the ownership of all copyrights, patents, trademarks, and all other intellectual property rights subsisting in the foregoing, and all adaptations to and modifications of the foregoing shall at all times remain with MSI and its third-party licensors, if any. MSI retains all rights not expressly licensed under this license. Except as otherwise expressly provided in this license, the copying, reproduction, distribution, or preparation of derivative works of the software, or any portion of the equipment, is strictly prohibited. Nothing in this license constitutes a waiver by MSI of its rights under United States copyright law.

Protection of Intellectual Property

The equipment and its incorporated technology (collectively referred to herein as the Technology), is protected under issued and pending patents. The Technology is valuable and proprietary technology, including trade secret technology, belonging to MSI. Much of the Technology is nonpublic and confidential. As our customer, you agree to further assist MSI in the protection of our intellectual property as follows: You agree to keep the Technology you receive confidential at all times, and shall not, without the prior written consent of MSI, disclose the Technology, in whole or in part, to any person outside of your company. You further agree that you shall not reverse engineer, disassemble, decompile, or copy the Technology without the prior written consent of MSI.

In addition, you agree that the equipment will not be used to manufacture anything other than products in which you hold intellectual property rights free of infringement of others. You may not use the equipment to manufacture any product infringing on another's patented rights. By accepting and using the equipment, you agree to defend and indemnify Machine Solutions, Inc., its officers, directors, employees, and agents, from and against any claims of infringement as a result of your use of the equipment.

Regulatory Matters

All equipment validations, product validation, final product QC testing and other testing required by the U.S Food and Drug Administration are the sole responsibility of the customer. Machine Solutions, Inc. shall have no responsibility or liability for the performance of any interventional product on which this equipment is used.

APPENDIX A

Omega Platinum Temperature Controllers

ATTENTION: The initialization portion of the Omega Temperature Controller(s) has been password-protected. Some reasons for this practice to be implemented are:

- Prevent unauthorized Access.
- Avoid Tampering.
- Mitigate user errors.
- User accountability.

For additional information, please contact service@machinesolutions.com

Temperature Controller Layout and Description of Button Actions

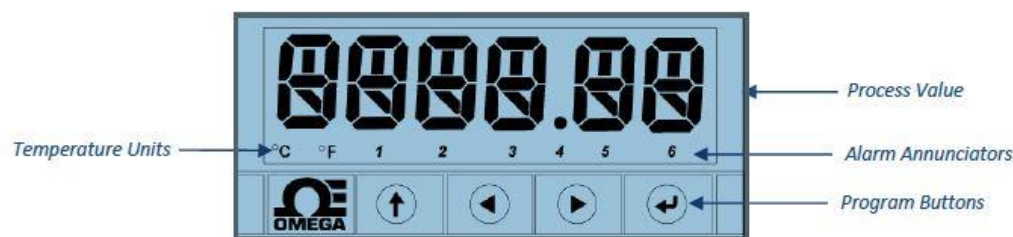


Figure A-1. Controller Layout





-  The UP button moves up a level in the menu structure. Pressing and holding the UP button navigates to the top level of any menu (oPER, PRoG, or INIt). This can be useful if you get lost in the menu structure.
-  The LEFT button moves across a set of menu choices at a given level (up in the Section 4 menu structure tables). When changing numerical settings, press the LEFT button to make the next digit (one digit to the left) active.
-  The RIGHT button moves across a set of menu choices at a given level (down in the Section 4 menu structure tables). The RIGHT button also scrolls numerical values up with overflow to 0 for the flashing digit selected.
-  The ENTER button selects a menu item and goes down a level, or it enters a numerical value or parameter choice.

Figure A-2. Description of Button Actions

| | |
|-------------|--|
| INIt | Initialization Mode: These settings are rarely changed after initial setup. They include transducer types, calibration, etc. |
| PRoG | Programming Mode: These settings are frequently changed. They include Set points, Control Modes, Alarms, etc. |
| oPER | Operating Mode: This mode allows users to switch between Run Mode, Standby Mode, Manual Mode, etc. |

Figure A-3. Level 1 Menu

Auto Tune Temperature Controller(s)

Please note, the Omega temperature controllers have been auto tuned and are set for optimal performance. Contact Machine Solutions for further diagnostics and instructions.











The Autotune function will select the tuning algorithm depending on the stability of current process and the error difference between current process and the Control Setpoint (SP1). If the process is relatively stable (i.e: at room temperature), a bump test will be performed to determine the plant characteristics. If the process is hot, or if the process is within 10% of Control Setpoint, limit cycle oscillation will be performed with the tuning setpoint taken at the process value when the Autotune function is triggered. Autotuning may be performed as many times as needed or when the operating conditions (i.e: process load, or setpoint) have changed significantly. To obtain good tuning results, ensure the process is stable prior to triggering autotune function. The process is stable when it is at ambient temperature, or it is tracking Control Setpoint (SP1) in auto mode.

Note: Ensure the temperature is at room temperature prior to starting the Auto Tune process.

Use the PRoG (Programming Mode) Menu for Steps 1-7












1. Setpoint 1 Configuration (PRoG > SP1 > #)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|----------------------|
| SP1 | _____ | | | | SP1 | | Process goal for PID |

| | |
|---|--|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIt, PRoG, and oPER |
|   | Navigate to PRoG (Programming Mode). |
|  | Select PRoG . |
|   | Navigate to SP1 (Setpoint 1 parameter). |
|  | Select the SP1 . |
|   | Set the process goal value. |
|  | Confirm the value. |







2. (PRoG> PId > A.to > 5.00)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|-------------------------------|
| PId | A.to | 5.00 | | | | | Set timeout time for autotune |

| | |
|---|--|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIt, PRoG, and oPER |
|   | Navigate to PRoG (Programming Mode). |
|  | Select PRoG . |
|   | Navigate to PId . |
|  | Select PId . |
|   | Navigate to A.to . |
|  | Select A.to |
|  | Set to 5.00 minutes or above |

3. (PRoG> PId > GAIN > _P_ > 2.77)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|----------------------------------|
| PId | GAIN | _P_ | 2.77 | | | | Manual Proportional Band setting |

| | |
|---|---|
| | Navigate back to level 3 by pushing the  button. |
|  | Navigate to GAIN . |
|  | Select GAIN . |
|  | Navigate to _P_ |
|  | Select _P_ |
|  | Enter 2.77 |


4. (PRoG > PId > GAIN > _I_ > 0.08)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|--------------------------------|
| PId | GAIN | _I_ | 0.08 | | | | Manual Integral Factor setting |

| | |
|---|------------------------|
|  | Navigate to _I_ |
|  | Select _I_ |
|  | Enter 0.08 |






5. (PRoG> PId > GAIN > _d_ > 23.87)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|----------------------------------|
| PId | GAIN | _d_ | 23.87 | | | | Manual Derivative Factor setting |

| | |
|---|------------------------|
|  | Navigate to _d_ |
|  | Select _d_ |
|  | Enter 23.87 |

6. (PRoG > Pld > AdPt > **ENbL**)





| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|------------|------------|-------------|------------|------------|------------|------------|------------------------------------|
| Pld | AdPt | ENbL | | | | | Enable fuzzy logic adaptive tuning |

| | |
|---|---|
| | Navigate back to level 3 by pushing the  button. |
|  | Navigate to AdPt |
|  | Select AdPt |
|  | Navigate to ENbL |
|  | Select ENbL |

To Begin AutoTune

7. (PRoG > Pld > tUNE > **StRt**)














| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|------------|------------|-------------|------------|------------|------------|------------|------------------------------------|
| Pld | tUNE | StRt | | | | | Enable fuzzy logic adaptive tuning |

| | |
|---|---|
| | Navigate back to level 3 by pushing the  button. |
|  | Navigate to tUNE |
|  | Select tUNE |
|  | Select StRt |
| | Auto Tune starts and displays DONE when completed. |

Changing Temperature Units on the Temperature Controller

Use Initialization Mode (INIt > RdG > °F °C > °F)








| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|-------|
| RdG | °F°C | °F | | | | | |

| | |
|---|--|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIt, PRoG, and oPER |
|  | Navigate to INIt (Initialization Mode). |
|  | Select INIt . |
|  | Navigate to RdG (Reading Formats). |
|  | Select RdG . |
|  | Navigate to °F°C (Temperature Units). |
|  | Select °F°C . |
|  | Navigate to °F |
|  | Select °F |
|  | Select up button to go back to level 1 |
|  | Navigate to oPER |
|  | Select oPER |
|  | "RUN" will be displayed. |
| | Back to temperature readout and normal operating status. |

Resetting the Temperature Controller(s) back to factory defaults.

To reset the Omega controller to factory defaults enter the INIt (Initialization Mode) Menu and follow the steps below.

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|------------|------------|------------|------------|------------|------------|------------|----------------------------------|
| F.dFt | ok? | | | | | | ENTER resets to factory defaults |

| | |
|--|---|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIt, PRoG, and oPER |
|  | Navigate to INIt (Initialization Mode). |
|  | Select INIt. |
|  | Navigate to F.dFt |
|  | Select F.dFt |
|  | Navigate to ok? |
|  | Select ok? |
| | The controller will now be reset. Next, enter the following MSI settings in red. |

Resetting the Temperature Controller(s) back to MSI settings.

Use Initialization Mode to set the following parameters 1-7.

1. Thermocouple Input Type (INIt > INPt > t.C. > k)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|---------------------|
| INPt | t.C. | k | | | | | Type K thermocouple |

| | |
|----|--|
| | Note: If not at Level 1, push the ↑ button to get to that level. Level 1 = INIt, PRoG, and oPER |
| ◀▶ | Navigate to INIt (Initialization Mode). |
| ☑ | Select INIt . |
| ◀▶ | Navigate to INPt (Input parameter). |
| ☑ | Select INPt . |
| ◀▶ | Navigate to t.C. (thermocouple). |
| ☑ | Select t.C. |
| ◀▶ | Navigate to the K thermocouple type. |
| ☑ | Select k . |










2. Decimal Point Format (INIt > RdG > dEC.P > FFF.F)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|---------------------------------|
| RdG | dEC.P | FFF.F | | | | | Reading format -999.9 to +999.9 |

| | |
|----|--|
| | Note: If not at Level 1, push the ↑ button to get to that level. Level 1 = INIt, PRoG, and oPER |
| ◀▶ | Navigate to INIt (Initialization Mode). |
| ☑ | Select INIt . |
| ◀▶ | Navigate to RdG (Reading Formats). |
| ☑ | Select RdG . |
| ◀▶ | Navigate to dEC.P (Decimal-point Format). |
| ☑ | Select dEC.P . |
| ◀▶ | Navigate to FFF.F (One decimal place). |
| ☑ | Select FFF.F . |










3. Temperature Units (INIt > RdG > °F°C > °C)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|-----------------------------|
| RdG | °F°C | °C | | | | | Degrees Celsius annunciator |

| | |
|--|--|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIt, PRoG, and oPER |
|  | Navigate to INIt (Initialization Mode). |
|  | Select INIt . |
|  | Navigate to RdG (Reading Formats). |
|  | Select RdG . |
|  | Navigate to °F°C (Temperature Units). |
| | <ul style="list-style-type: none"> • °C - Degrees Celsius (factory default), °C annunciator turned on • °F - Degrees Fahrenheit, °F annunciator turned on |
|  | Select °F°C . |
|  | Navigate to °C |
|  | Select °C |

4. Filter (INIt > RdG > FLtR > 8)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|---------------------------------|
| RdG | FLtR | 8 | | | | | Readings per displayed value: 8 |

| | |
|---|--|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIt, PRoG, and oPER |
|  | Navigate to INIt (Initialization Mode). |
|  | Select INIt . |
|  | Navigate to RdG (Reading Formats). |
|  | Select RdG . |
|  | Navigate to the FLtR (Filter parameter). |
|  | Select FLtR . |
|  | Navigate to 8 (0.4 s). |
|  | Select 8 . |

Equipment User Manual

5. Normal Color (INIt > RdG > NCLR > GRN)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|------------|------------|------------|------------|------------|------------|------------|------------------------------|
| RdG | NCLR | GRN | | | | | Default display color: Green |

| | |
|----|--|
| | Note: If not at Level 1, push the ↑ button to get to that level. Level 1 = INIt, PRoG, and oPER |
| ◀◀ | Navigate to INIt (Initialization Mode). |
| ☑ | Select INIt . |
| ◀◀ | Navigate to RdG (Reading Formats). |
| ☑ | Select RdG . |
| ◀◀ | Navigate to NCLR (Normal Color parameter). |
| ☑ | Select NCLR . |
| ▶▶ | Navigate to GRN (Green) . |
| ☑ | Select GRN . |

6. Brightness (INIt > RdG > bRGt > HIGH) Brightness setting = HIGH










| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|------------|------------|------------|------------|------------|------------|------------|-------------------------|
| RdG | bRGt | HIGH | | | | | High display brightness |

| | |
|----|--|
| | Note: If not at Level 1, push the ↑ button to get to that level. Level 1 = INIt, PRoG, and oPER |
| ◀◀ | Navigate to INIt (Initialization Mode). |
| ☑ | Select INIt . |
| ◀◀ | Navigate to RdG (Reading Formats). |
| ☑ | Select RdG . |
| ◀◀ | Navigate to bRGt (Brightness parameter). |
| ☑ | Select bRGt . |
| ◀◀ | Navigate to HIGH (High display brightness). |
| ☑ | Select HIGH . |

Equipment User Manual

7. Safety Features (INIt > SFty > PwoN > RSM)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|---|
| SFty | PwoN | RSM | | | | | RUN on power up if not previously faulted |

| | |
|---|--|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIt, PRoG, and oPER |
|  | Navigate to INIt (Initialization Mode). |
|  | Select INIt . |
|  | Navigate to SFty (Safety Features). |
|  | Select SFty . |
|  | Navigate to PwoN (Power On Confirmation parameter). Note: PwoN – Requires confirmation before running automatically at startup |
|  | Select PwoN . |
|  | Navigate to RSM . Note: RSM – Program runs automatically at startup if not previously in fault state. |
|  | Select RSM . |











8. Configure the USB port

| | | | | | | | |
|------|-----|--|--|--|--|--|------------------------|
| CoMM | USb | | | | | | Configure the USB port |
|------|-----|--|--|--|--|--|------------------------|

Use Programming Mode (PRoG) to set the following parameters 9-14.

9. Setpoint 1 Configuration (PRoG > SP1 > #)










| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|----------------------|
| SP1 | _____ | | | | | | Process goal for PID |

| | |
|---|--|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIt, PRoG, and oPER |
|   | Navigate to PRoG (Programming Mode). |
|  | Select PRoG . |
|   | Navigate to SP1 (Setpoint 1 parameter). |
|  | Select the SP1 . |
|   | Set the process goal value. |
|  | Confirm the value. |

Sections 10-12 are set for all models except 220B, 320B, 43B, and TF-120
For models 220B, 320B, 43B, and TF-120 skip to Section 13

10. Alarm High/Low setting (PRoG > ALM.1 > type > HI.Lo)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---------|---------|---------|---------|---|
| ALM.1 | | | | | | | Note: This submenu is the same for all other Alarm configurations. |
| | tyPE | | | | | | |
| | | HI.Lo. | | | | | Alarm: process value outside Alarm triggers |





| | |
|---|---|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIt, PRoG, and oPER |
|   | Navigate to PRoG (Programming Mode). |
|  | Select PRoG . |
|   | Navigate to ALM.1 (Alarm Configuration 1). Note: Select Alarm Configuration to set up, change, enable, or disable Alarms. Either or both Alarms can be assigned to trigger display color changes, annunciators, and / or outputs. Either or both Alarm configurations can be assigned to multiple outputs. The ALM.1 and ALM.2 configuration menus have all the same settings and function in the same manner. |
|  | Select ALM.1 . |
|   | Navigate to tyPE (Alarm Type Parameter). Note: This parameter will control the basic behavior of the selected alarm. |

| | |
|---|-------------------------|
|  | Select tyPE . |
|  | Navigate to HILO |
|  | Select HILO |





11. Alarm high, low, color reference parameters

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|------------|---------|---------|---------|---------|---|
| ALM.1 | ALR.H | <u>2.5</u> | | | | | Alarm high parameter for trigger calculations |
| ALM.1 | ALR.L | <u>2.5</u> | | | | | Alarm low parameter for trigger calculations |
| ALM.1 | A.CLR | REd | | | | | Red display when Alarm is active |





Alarm High Reference (PRoG > ALM.1 > ALR.H)

| | |
|---|--|
| | Follow Steps in Section 10. Note: After selecting HI.Lo setting, tyPE parameter should be showing in window. |
|  | Navigate to ALR.H (Alarm High Reference parameter). |
|  | Select ALR.H . |
|  | Set the Alarm High Reference value = 2.5 Note: One arrow moves the digit and the other moves the value. |
|  | Confirm the value. |

Alarm Low Reference (PRoG > ALM.1 > ALR.L)














| | |
|---|--|
| | Follow Steps in Section 10. Note: After selecting HI.Lo setting, tyPE parameter should be showing in window. |
|  | Navigate to ALR.L (Alarm Low Reference parameter). |
|  | Select ALR.L . |
|  | Set the Alarm Low Reference value = 2.5 Note: One arrow moves the digit and the other moves the value. |
|  | Confirm the value. |

Alarm Color (PRoG > ALM.1 > A.CLR > REd)

| | |
|---|--|
| | Follow Steps in Section 10. Note: After selecting HI.Lo setting, tyPE parameter should be showing in window. |
|  | Navigate to A.CLR (Alarm Color parameter). |
|  | Select A.CLR . |
|  | Navigate to REd (Alarm conditions are displayed in red). |
|  | Select the REd . |

12. Output as Alarm 1 (PRoG > dtR1 > ModE > ALM.1)









| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|---------|---------|---------|---|---------|---------|---------|---|
| dtR.1 | | | | | | | dtR.1 is replaced by output type. For example: oUt# |
| | ModE | | Note: This submenu is the same for all other outputs. | | | | |
| | | ALM.1 | | | | | Output is an Alarm using ALM.1 configuration |

| | |
|---|---|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIT, PRoG, and oPER |
|   | Navigate to PRoG (Programming Mode). |
|  | Select PRoG. |
|   | Navigate to dtR1 (Double Throw Mechanical Relay number 1). Note: All output channels have the same menu structure. However, only those parameters that apply for the type of output being configured appear in that output's menu. |
|  | Select dtR1. |
|   | Navigate to ModE. Note: ModE – Allows the output to be set up as a control, Alarm, retransmission, or Ramp/Soak event output; the output can also be turned off. |
|  | Select ModE. |
|   | Navigate to ALM.1. Note: ALM.1 – Set the output to be an Alarm using the ALM.1 configuration |
|  | Select ALM.1. |

Section 13 is for Models 220B, 320B, 43B, and TF-120

13. Turn Off Output Channel (P_{RoG} > dtR1 > ModE > oFF)










| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|------------|------------|------------|------------|------------|------------|------------|---------------------|
| dtR.1 | ModE | oFF | | | | | Output does nothing |

| | |
|---|--|
| | <p>Note: If not at Level 1, push the  button to get to that level.</p> <p>Level 1 = INIt, P_{RoG}, and oPER</p> |
|  | Navigate to P_{RoG} (Programming Mode). |
|  | Select P_{RoG} . |
|  | Navigate to dtR1 (Double Throw Mechanical Relay number 1). |
| | <p>Note: All output channels have the same menu structure. However, only those parameters that apply for the type of output being configured appear in that output's menu.</p> |
|  | Navigate to ModE . |
| | <p>Note: ModE – Allows the output to be set up as a control, Alarm, retransmission, or Ramp/Soak event output; the output can also be turned off.</p> |
|  | Select ModE . |
|  | Navigate to oFF . |
| | <p>Note: oFF – Turn off the output channel</p> |
|  | Select oFF . |

Equipment User Manual

14. PID Control Mode (PRoG > dc.1 > ModE > PId)










| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|------------|------------|------------|------------|------------|------------|------------|--|
| dc.1 | | | | | | | dc.1 is replaced by output type. For example: oUt# |
| | ModE | | | | | | |
| | | PId | | | | | PID Control Mode |

| | |
|---|--|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIt, PRoG, and oPER |
|  | Navigate to PRoG (Programming Mode). |
|  | Select PRoG . |
|  | Navigate to dc1 (DC Pulse output number 1). Note: All output channels have the same menu structure. However, only those parameters that apply for the type of output being configured appear in that output's menu. |
|  | Select dc1 . |
|  | Navigate to ModE . Note: ModE – Allows the output to be set up as a control, Alarm, retransmission, or Ramp/Soak event output; the output can also be turned off. |
|  | Select ModE . |
|  | Navigate to PId . Note: PId - Set the output to Proportional-Integral-Derivative (PID) Control Mode. |
|  | Select PId . |

Equipment User Manual

15. Increase to SP1 (PRoG > PLD > ACtN > RVRS)

| Level 2 | Level 3 | Level 4 | Level 5 | Level 6 | Level 7 | Level 8 | Notes |
|------------|------------|------------|------------|------------|------------|------------|--|
| PId | ACtN | RVRS | | | | | Increase to SP1 (i.e., heating) |

| | |
|---|--|
| | Note: If not at Level 1, push the  button to get to that level. Level 1 = INIT, PRoG, and oPER |
|  | Navigate to PRoG (Programming Mode). |
|  | Select PRoG . |
|  | Navigate to PId . |
| | Note: PId – Set the output to Proportional-Integral-Derivative (PID) Control Mode |
|  | Select PId . |
|  | Navigate to ACtN . |
| | Note: ACtN – Determines the action direction for control |
|  | Select ACtN . |
|  | Navigate to RVRS . |
| | Note: RVRS – Off when Process Value is > Setpoint, and on when Process Value is < Setpoint (e.g., heating); deadband is applied below Setpoint (factory default) |
|  | Select RVRS . |

A full description of features can be found here: <https://assets.omega.com/manuals/M5451.pdf>.